

AHL Dual Mode & ARL Dual Mode Battery Installation Guide

1

Unscrew the bottom portion of the light.

This will open the battery compartment.

2

Check the battery.

The larger metal section goes in first. The smaller button section facing up into the light.

3

Locate the manual button.

To test that you have installed the battery correctly, cover the solar panel completely with your hand and press the manual button once to select Flashing Mode.

4

Press the button a second time.

This will employ Steady Burn. Press the button a third time to turn it off. If you do not cover the solar panel completely and press the manual button, nothing will happen.

5

Take care of your AHL Dual Mode.

We recommend removing the batteries and storing them separately when the airport lights are not in use to prolong their battery life.